

newline



SUPPORT  
MESSAGE

# HIDDEN ANDROID GUIDE

Lyra, Elara and Vega series



# HIDDEN ANDROID FUNCTION

The hidden Android function will allow us to work with our screen eliminating the interaction with the operating system Android.


Unlike a manual installation of a firmware without Android, in this case the operating system is working in the background in a hidden way.

The panel will be shown in black until we connect a source from which to operate.





## ENABLE THE FUNCTION

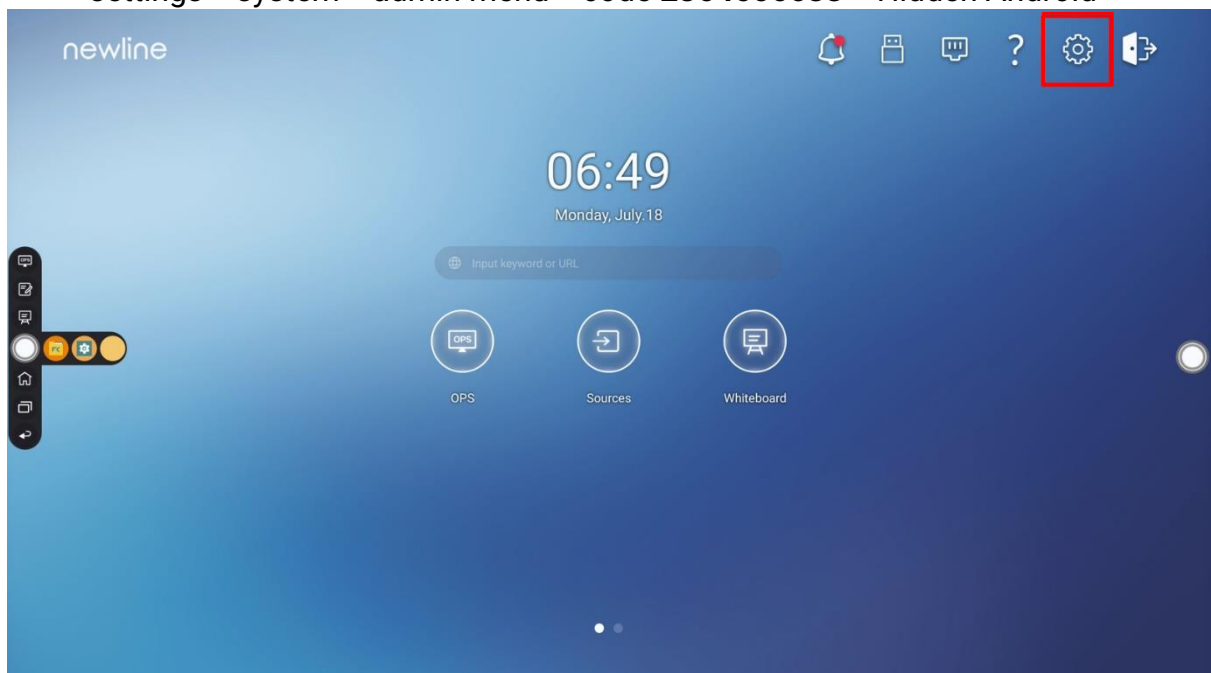
1. The behavior is the same for the different series (Lyra, Elara and Vega)
2. To enable the Hidden Android log in the Admin menu following the path: settings > system > admin menu > code **2364606633** > Hidden Android





## Settings


 **Date & time**  
GMT-04:00 Eastern Daylight Time


 **Storage**  
22% Used - 49.85 GB Free


 **Apps**  
Permissions, Default Apps


 **Display & Theme**  
Wallpaper, Theme, Logo

 **Tool Bar**  
Customization, Size

 **Input and Output**  
Signal Source Change, CEC


 **Power**  
Power Option, Energy Saving


 **Screen Eye Filters**  
The filter level warms the color temperature of your screen to make it easier to read text on bright screens

 
 
 **System**  
Updates, Admin Mode



## System

 **About**  
TT-7522Q


 **Advanced**  
Admin Mode

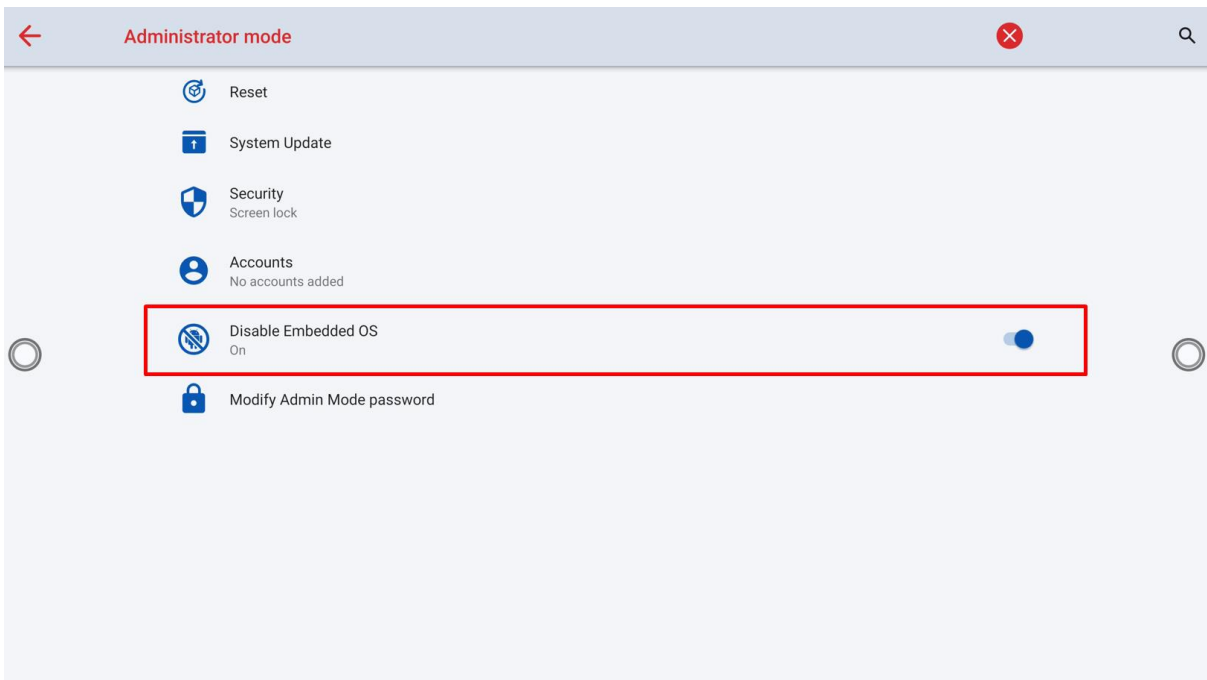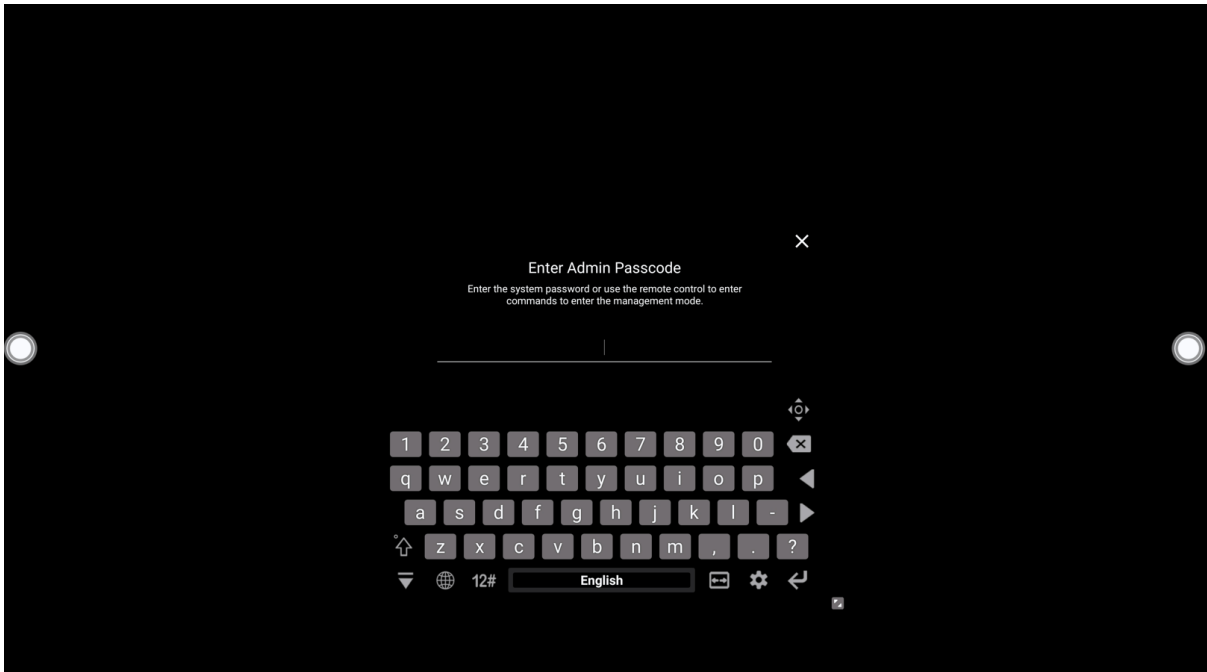

2. After disable the Android the panel will request for a restart.
3. Once the restart is done, the Android will be hidden and the screen will keep on black until any source is detected (OPS slot or any port)

## MAIN FUNCTIONS


 
The main android actions are grouped in the quick settings, although the Android is hidden, we can display this menu by sliding with two fingers from the lower half of the screen.

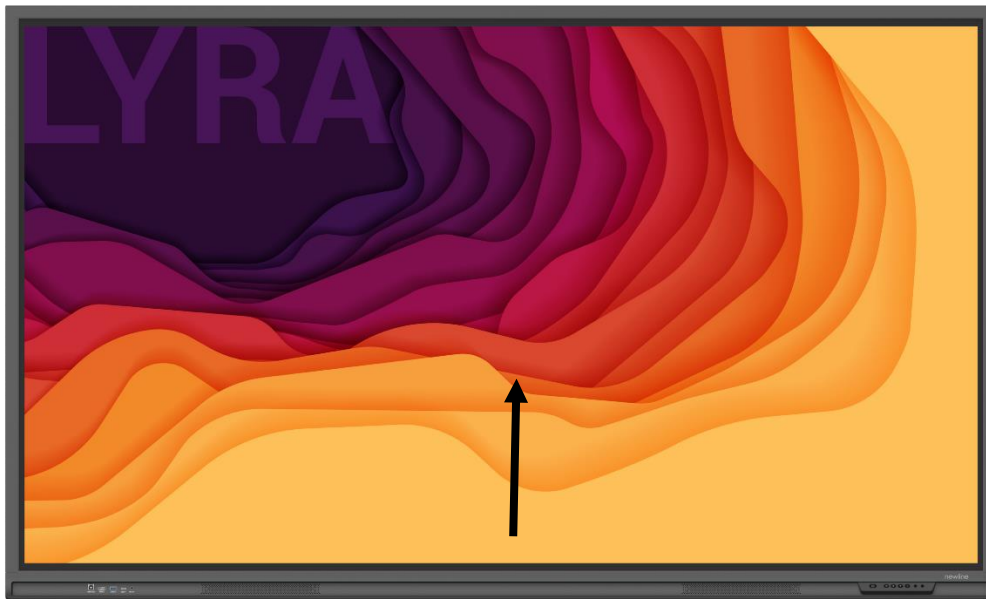


Within these basic options we find:

1. General
  - a. Volume
  - b. Brightness
  - c. Sources
2. Display
  - a. Aspect ratio
  - b. Color range
3. Image
  - a. Image mode
  - b. Color temp
  - c. Back light mode
4. Sound
  - a. Volume

- b. Mute
- c. Sound only
- d. Equalizer

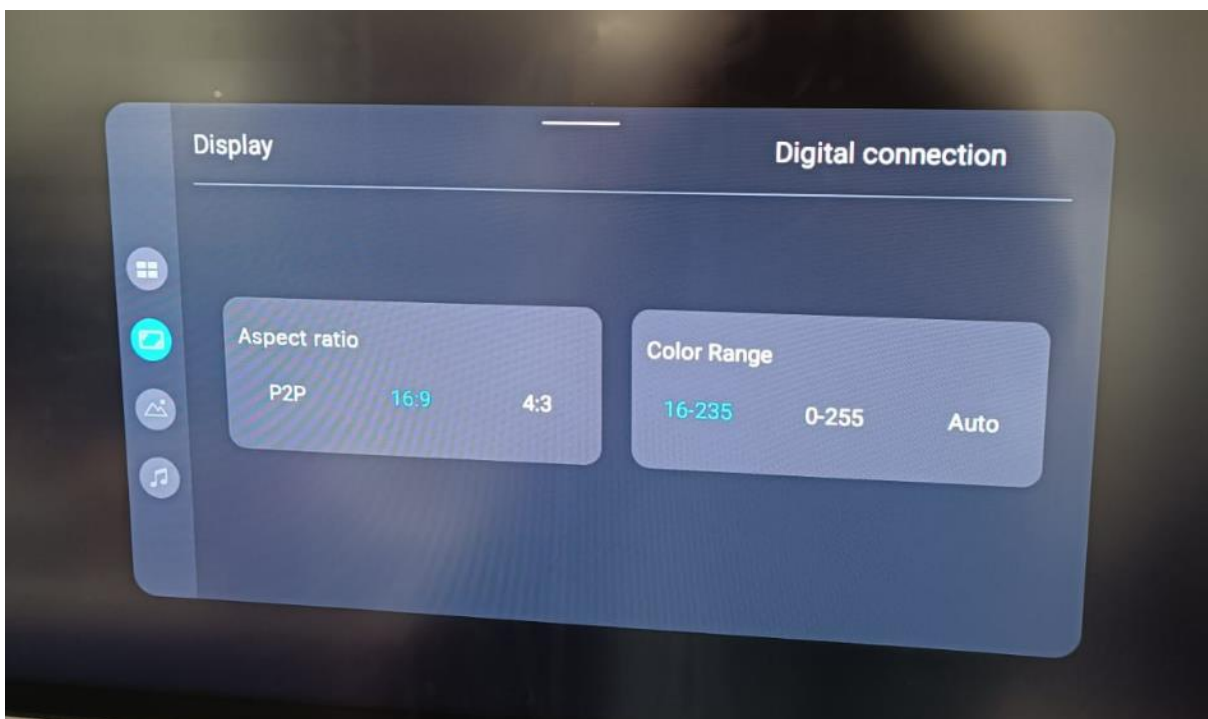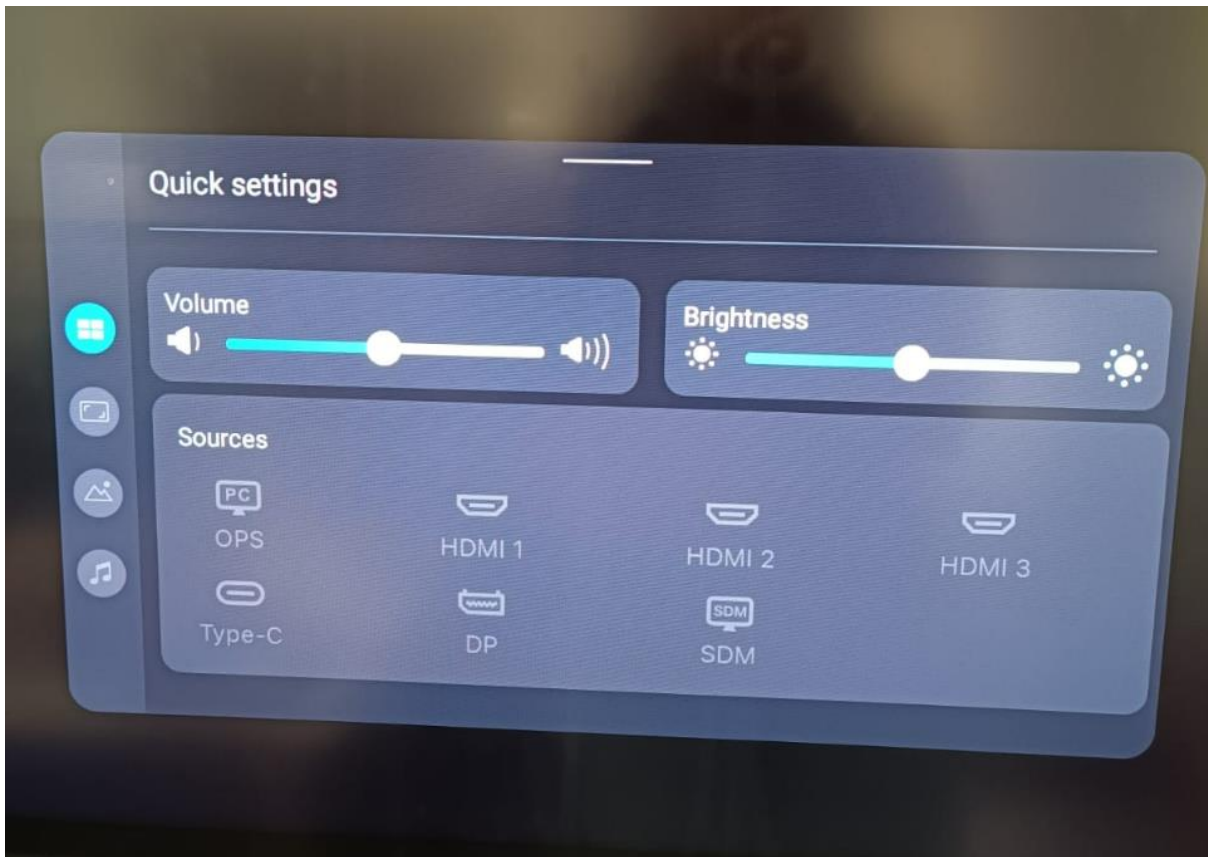

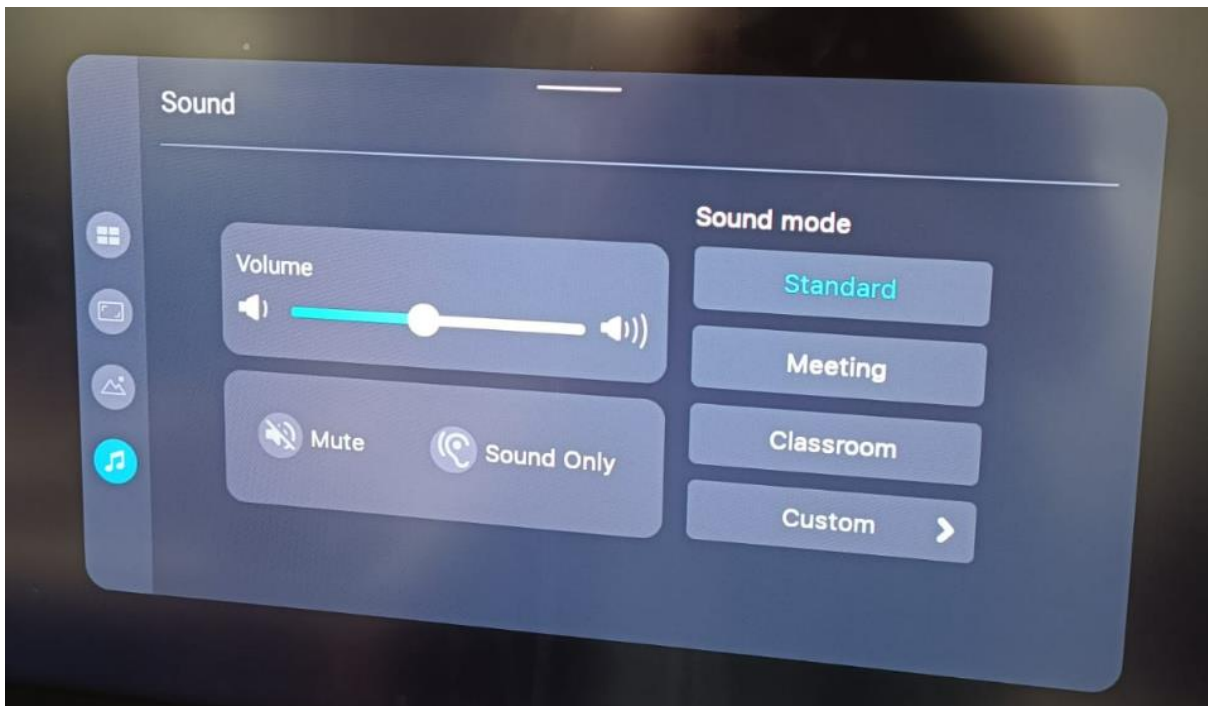

## ENABLE THE ANDROID

To restore the Android is needed to use the remote control. Applying the special commands **Down Down Up Up Left Right** the system will be restored. Once we send the commands a pop up will notify the need to restart the screen, after the restart the Android will be unhidden

# REMOTE CONTROL CODES SUMMARY

## Lyra

**Admin menu settings code:** 2364606633


**Android restore:** Down + Down + Up + Up + Left + Right



## Elara & Vega

**Admin menu settings code:** 2364606633

**Android restore:** Down + Down + Up + Up + Left + Right

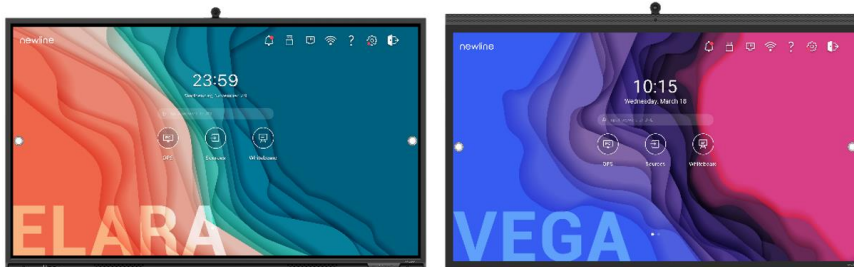

## VIDEO

[https://newlineinteractive-my.sharepoint.com/:f/g/person/newline\\_eu\\_newline-interactive\\_com/EgGRnX3IWlIBujZVAiEaO74B\\_gjRkFofOismfcFHKVANLw?e=B5a1Gt](https://newlineinteractive-my.sharepoint.com/:f/g/person/newline_eu_newline-interactive_com/EgGRnX3IWlIBujZVAiEaO74B_gjRkFofOismfcFHKVANLw?e=B5a1Gt)